Fast Plate

KTM SMCR 690
2019 - 2026

Assembly Instructions



Items included



Step 1





Attach the license plate mount to the switch mechanism

Step 2








Screw it together using the M4x25 along with the nut and washer.

Step 3



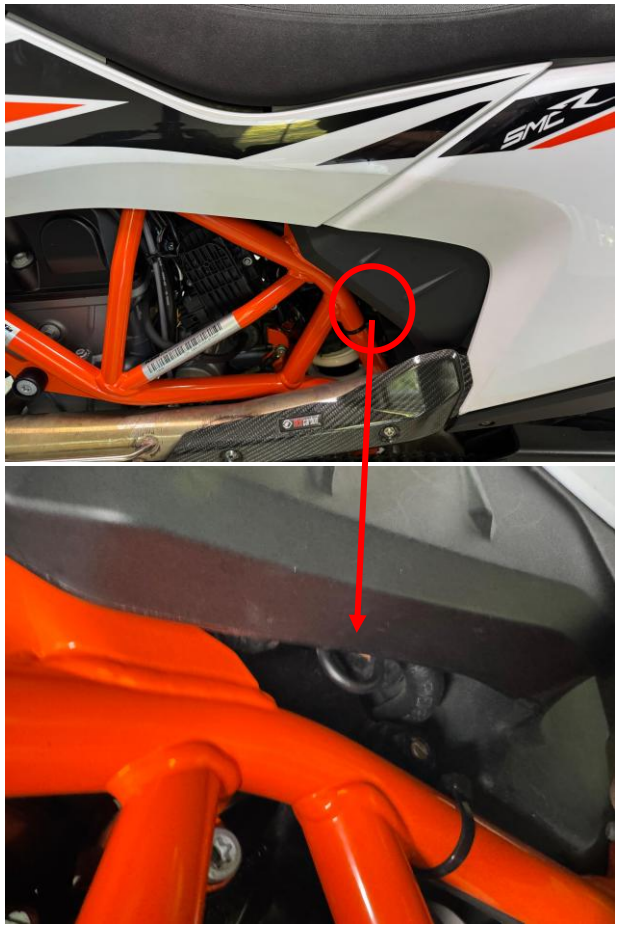






Remove the fuel cap and the seat.

To remove the seat, pull the cable on the left side of the frame. Here is a marking showing where the cable is located.

Step 4

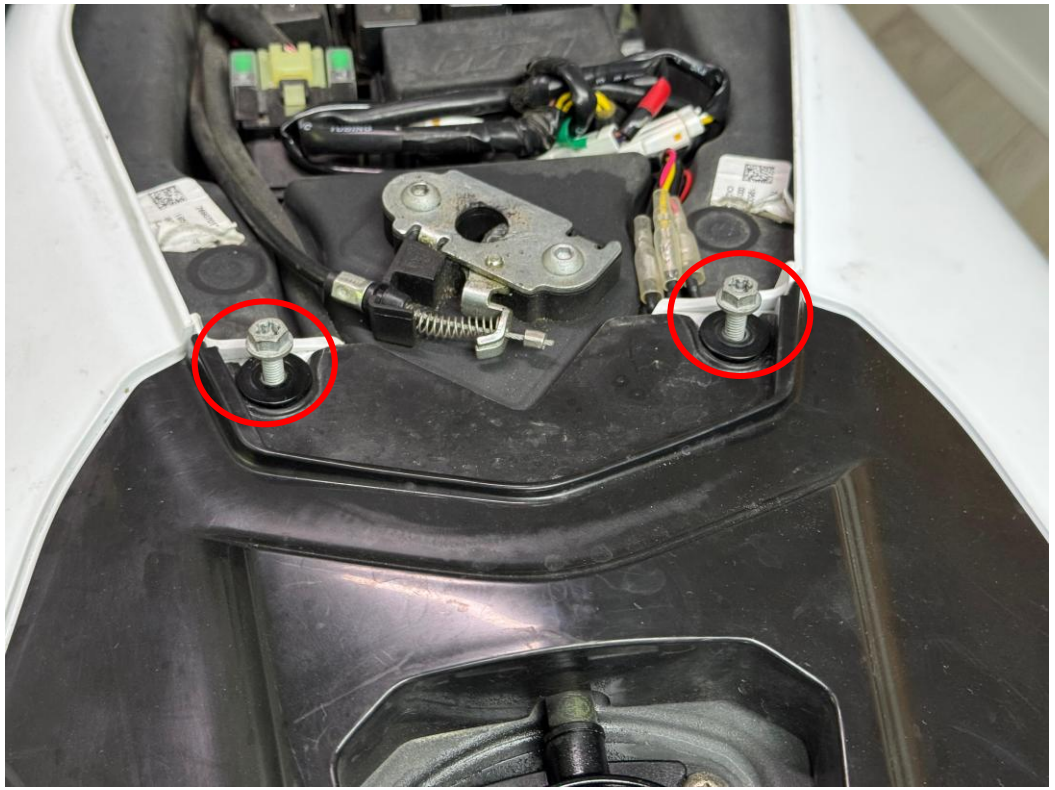


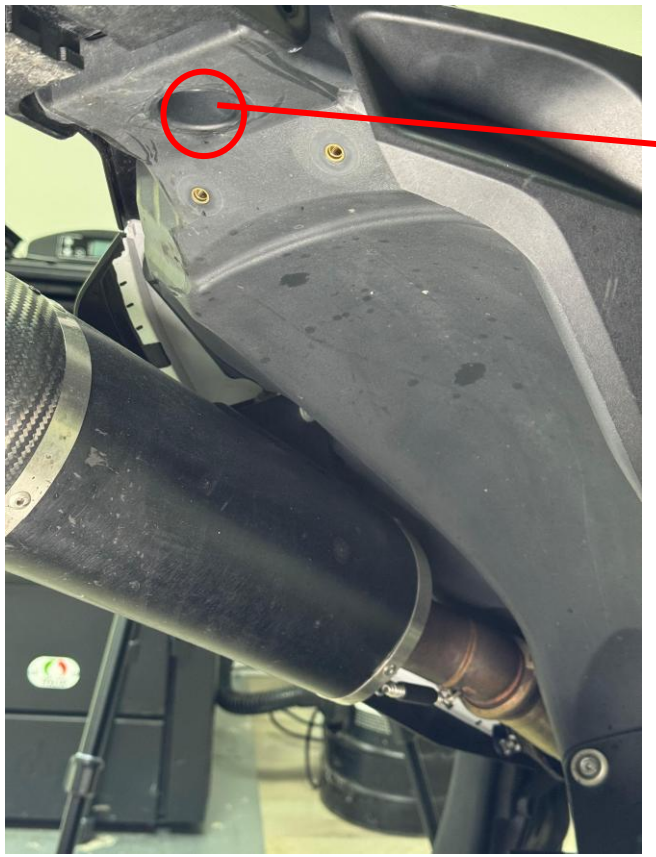


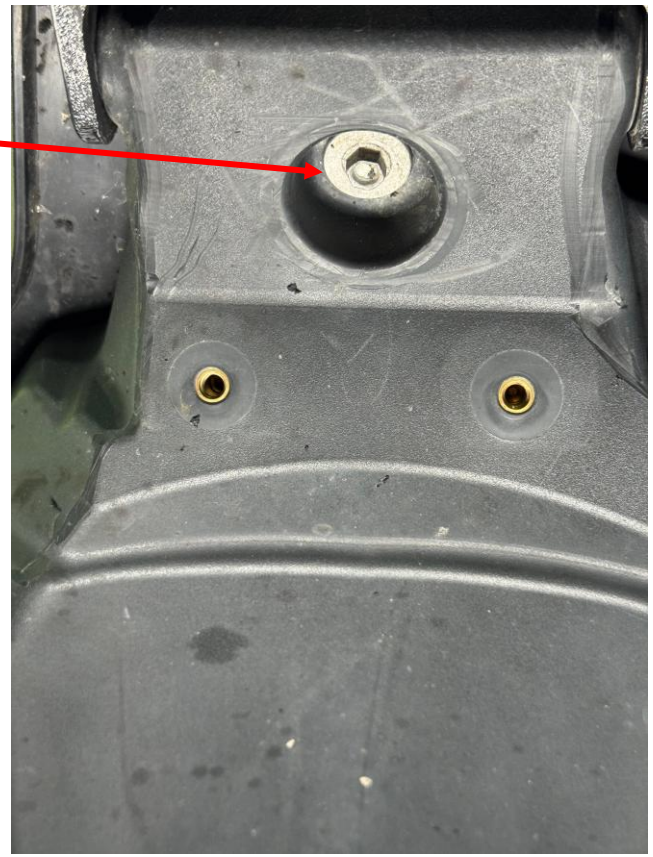

Remove the 3 screws as shown in the pictures.


Step 5

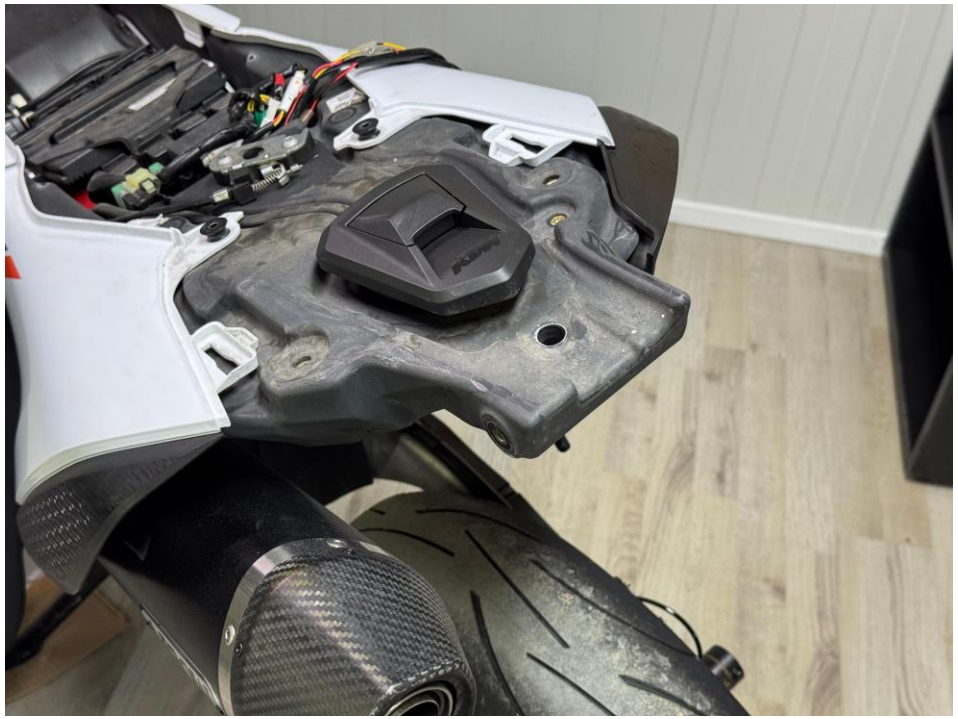


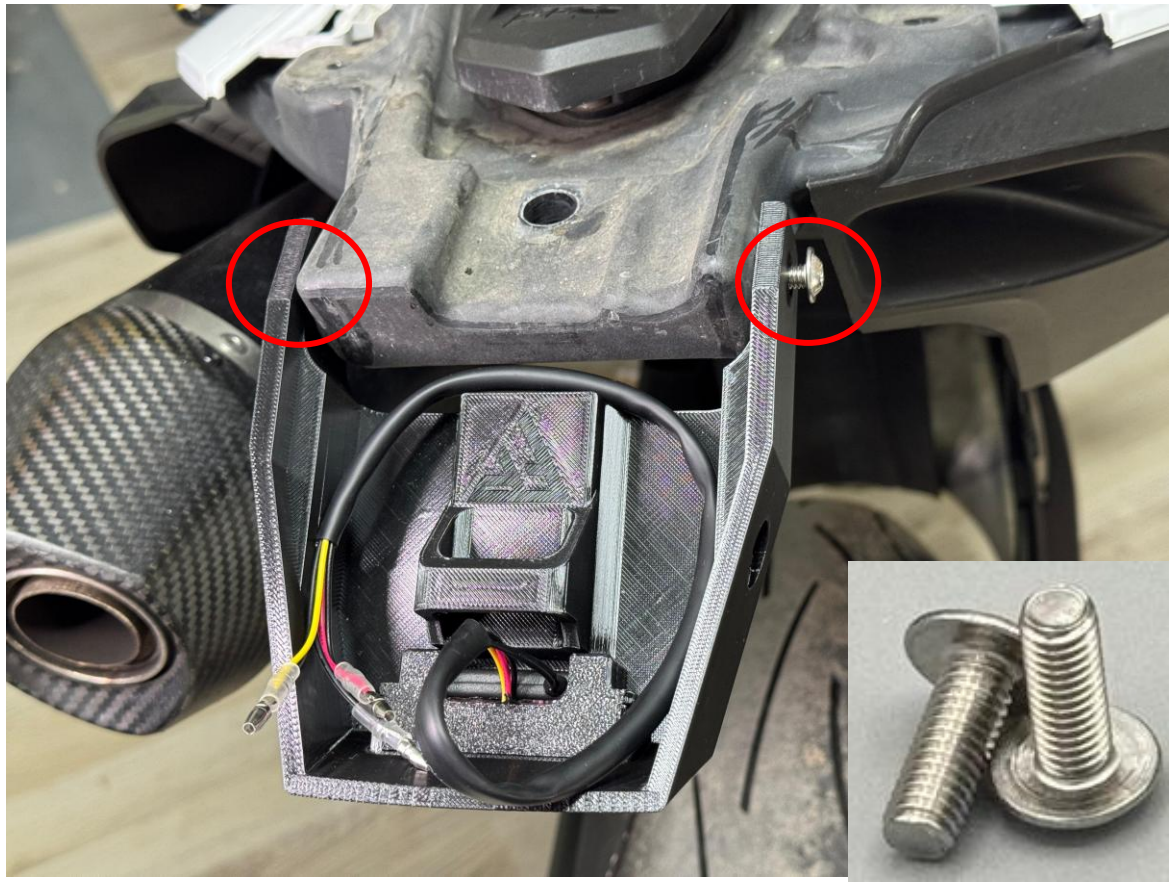

Place the license plate holder at the rear of the tank and fasten it with the two M6x16 screws.

Step 6

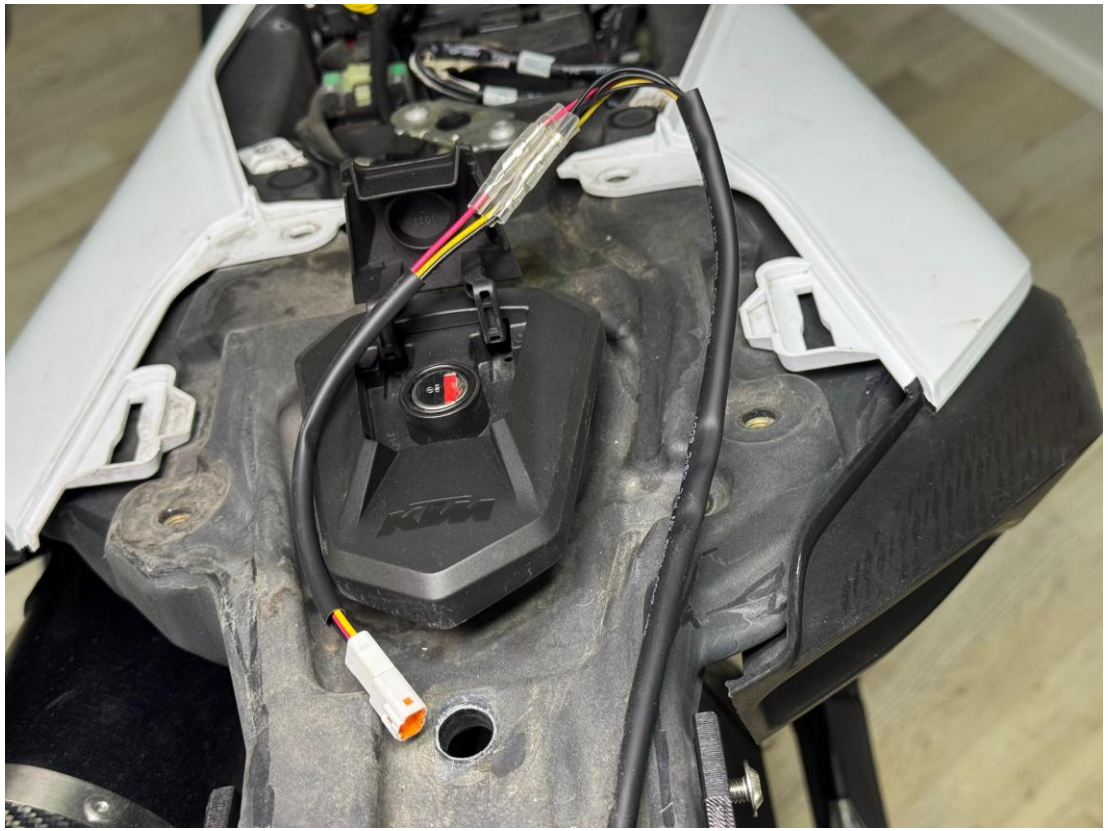


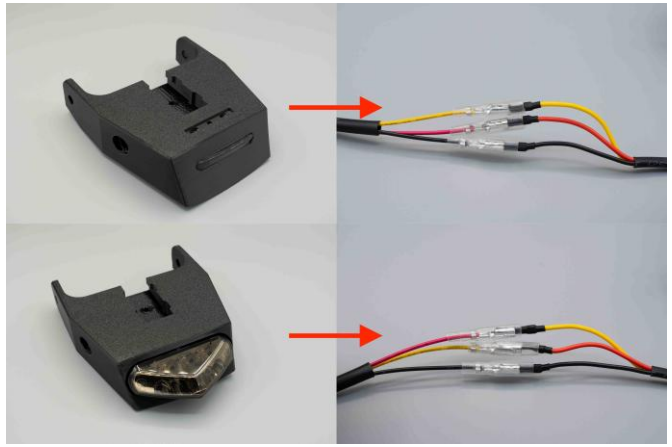



Connect the taillight to our **plug-and-play connector**. If you <u>haven't</u> **ordered** one, you will need to **solder** the connector to the **original wiring**.

Step 7

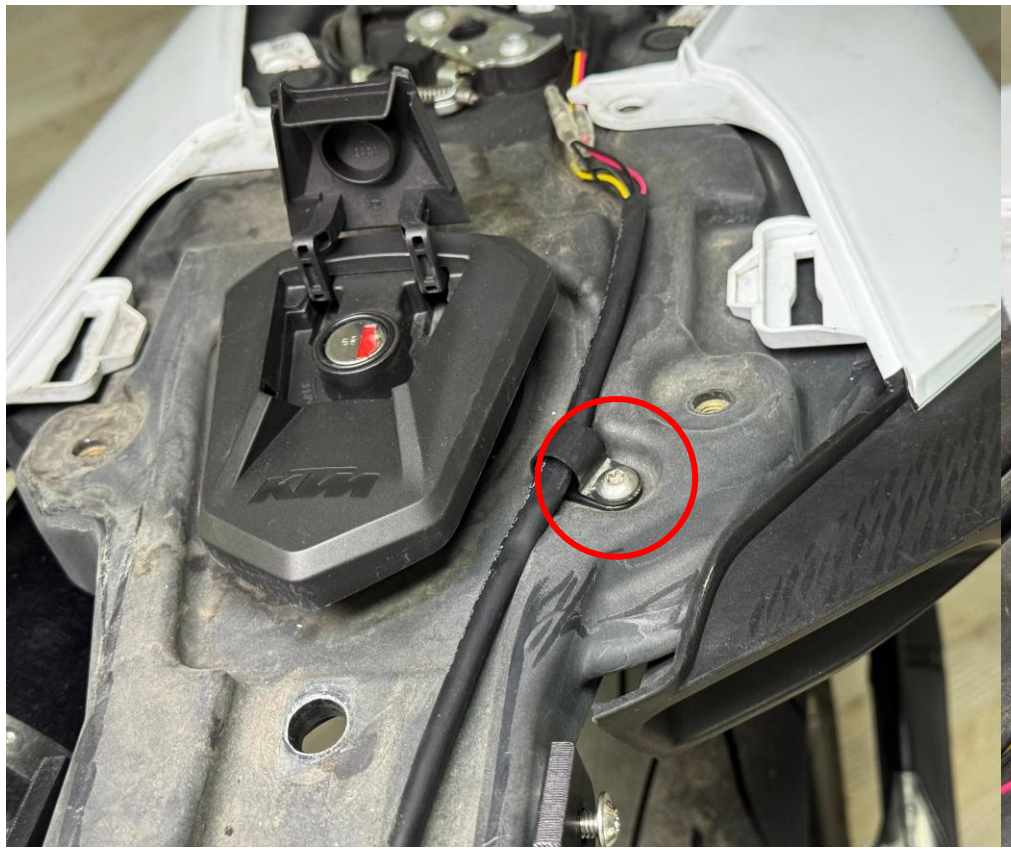




Position the cable like this and secure it with the cable guide.


Step 8



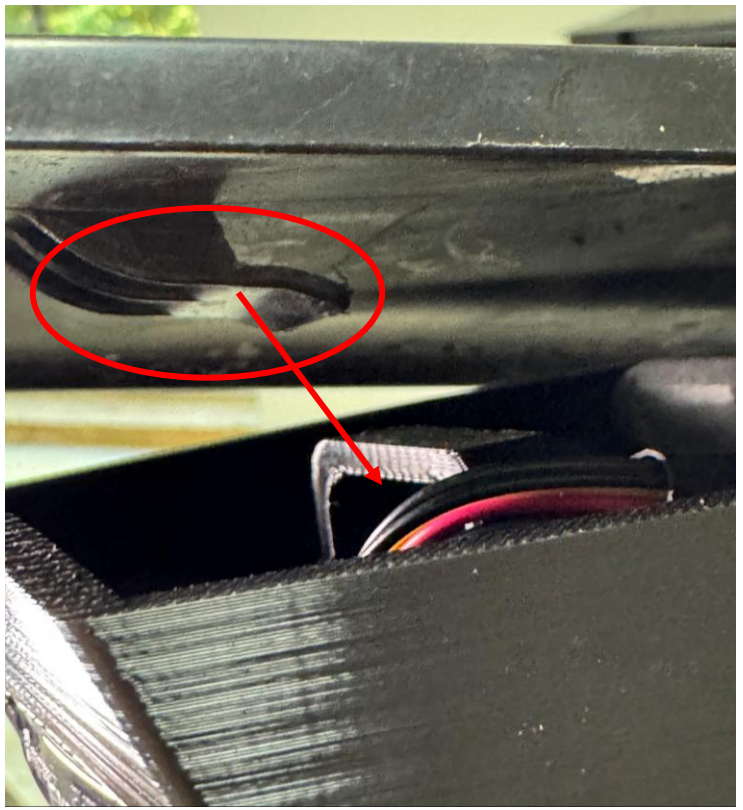

Slide the tail section back onto the tank and make sure that the **hook** underneath the **tail** engages with the mounting bracket on the FastPlate.

Step 9

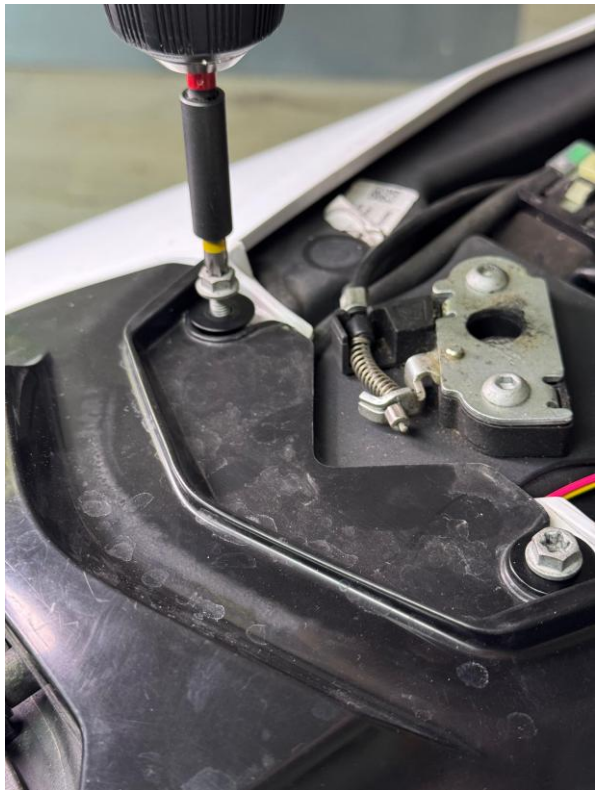





Tighten these screws again. You can also use medium-strength Loctite for better screw retention.

Finished!







These are turn signal spacers that increase the distance.